AMBERG STRUCTURAL DEFORMATION

Product Datasheet

As-built analysis of TBM segmental rings

Amberg Structural Deformation is a powerful software solution for analysing and reporting deformations in segmental tunnel linings. It streamlines the extraction of detailed deformation data from as-built profiles and supports both laser scanning and total station workflows. The software performs ovalisation assessments based on International Tunnelling Association (ITA) guidelines.

Applications

lines


- Ovalisation Assessment:
 Perform precise ovality calculations per ITA guide-
- Clearance Analysis:
 Evaluate clearances from the theoretical centreline
- Ring Deformation Monitoring:
 Track changes in ring deformation over time to assess structural integrity
- Mechanical and Electrical Fit-Out:
 Facilitate installation of systems with accurate as-built data

Key Features and Benefits

- Instant Ovality Calculation:
 Instantly calculates ovality using ITA-compliant methods
- Best-Fit Shape:
 Provides highly precise best-fit ellipses and circles for deformation analysis
- As-Built Centreline Measurement:
 Measures and reports as-built centreline for alignment and verification
- Automatic Data Cleaning:
 Filters irrelevant points, improving analysis accuracy
- Amberg Tunnel Portfolio Integration:
 Integrates with the Amberg Tunnel suite for all tunnel construction and maintenance stages



Profile view of geometric calculations

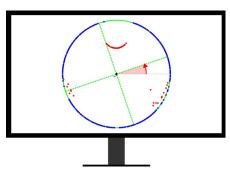

Automatic removal of non-tunnel wall points



Overall view of geometric deformations



© 2024/09 Amberg Technologies AG, Switzerland / Figures, descriptions and technical specifications are non-binding. Subject to change

AMBERG STRUCTURAL DEFORMATION TECHNICAL SPECIFICATIONS



Tubes Supported Shafts Supported Construction stages Supported Theoretical profile shape Circular profile (fixed radius) is required for the Structural Deformation analysis Design import formats LandXML, DXF, manual input (Note: IFC is not supported for the Structural Deformation analysis) Transverse slope (superelevation) Block definition Supported (used for assigning ring numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape Visualise outliers Turn on / off in the profile view	Theoretical design import /	reation
Shafts Construction stages Supported Theoretical profile shape Circular profile (fixed radius) is required for the Structural Deformation analysis Design import formats LandXML, DXF, manual input (Note: IFC is not supported for the Structural Deformation analysis) Transverse slope (superelevation) Block definition Supported (used for assigning ring numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape		
Construction stages Theoretical profile shape Circular profile (fixed radius) is required for the Structural Deformation analysis Design import formats LandXML, DXF, manual input (Note: IFC is not supported for the Structural Deformation analysis) Transverse slope (superelevation) Block definition Supported (used for assigning ring numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape		
Theoretical profile shape Circular profile (fixed radius) is required for the Structural Deformation analysis Design import formats LandXML, DXF, manual input (Note: IFC is not supported for the Structural Deformation analysis) Transverse slope (superelevation) Block definition Supported (used for assigning ring numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape		
required for the Structural Deformation analysis Design import formats LandXML, DXF, manual input (Note: IFC is not supported for the Structural Deformation analysis) Transverse slope (superelevation) Block definition Supported (used for assigning ring numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape		
Design import formats LandXML, DXF, manual input (Note: IFC is not supported for the Structural Deformation analysis) Transverse slope (superelevation) Block definition Supported (used for assigning ring numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	Theoretical profile shape	required for the Structural
(superelevation) Block definition Supported (used for assigning ring numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	Design import formats	LandXML, DXF, manual input (Note: IFC is not supported for the
numbers to as-built profiles) As-built profile import From total station ASCII From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Amberg Applications From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape		Supported
From total station From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Amberg Applications Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	Block definition	
From point cloud Supports extraction of as-built profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Amberg Applications Supported Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	As-built profile import	
profiles from georeferenced point clouds (LAS, E57, PTS, ASCII) From Amberg Navigator tablet Supported From Amberg Applications Supported From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	From total station	ASCII
From Amberg Applications From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	From point cloud	profiles from georeferenced point
From Tunnelscan analysis Profiles can be extracted directly from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	From Amberg Navigator tablet	Supported
from the point cloud analysis into the Structural Deformation analysis Automatic cleaning / outlier removal Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	From Amberg Applications	Supported
Filter outliers Non-wall points automatically detected and removed based on user-defined deviations from the best-fit shape	From Tunnelscan analysis	from the point cloud analysis into the Structural Deformation
detected and removed based on user-defined deviations from the best-fit shape	Automatic cleaning / outlier	
Visualise outliers Turn on / off in the profile view	Filter outliers	detected and removed based on user-defined deviations from the
	Visualise outliers	Turn on / off in the profile view

Calculations		
Inner diameters through as-built centre	Horizontal, vertical, both diagonals (45° spacing)	
Inner diameters through design centre	Horizontal, vertical	
Best-fit shape	Ellipse or circle	
Ellipse parameters	Major and minor axes lengths, best-fit centre deviations from the design centreline, ellipse orientation	
Best-fit circle parameters	Best-fit circle radius, best-fit deviations from the design centreline	
Ovality calculation	User-defined: based on the International Tunnelling Associa- tion (ITA) guidelines, optionally choose the standard ovality formula	
Crown and invert elevations	Calculated based on best-fit arcs	
Visualisation		
2D profile view	Highly customizable display (inner diameters, labels, best-fit shapes, outliers)	
2D profile data tables	Profile point coordinates, diameter values, profile attribute info, best-fit shape parameters	
Profile navigator	Sort profiles, filter profiles, add additional profile navigator columns	
Overall view	Charts of overall deformations, main table view	
Deliverables		
Layered DXF (2D profiles)		
Profile graphical report (PDF)		
Excel export (all calculated values and attribute information)		
Measured profile points - with a wall points)	and without outliers (non-tunnel	



